


VW Hydrostatic Profiler

The Geosense® Vibrating Wire Hydrostatic Profiler is used for the measurement of sub-surface settlement.



VW Hydrostatic Profiler

Overview

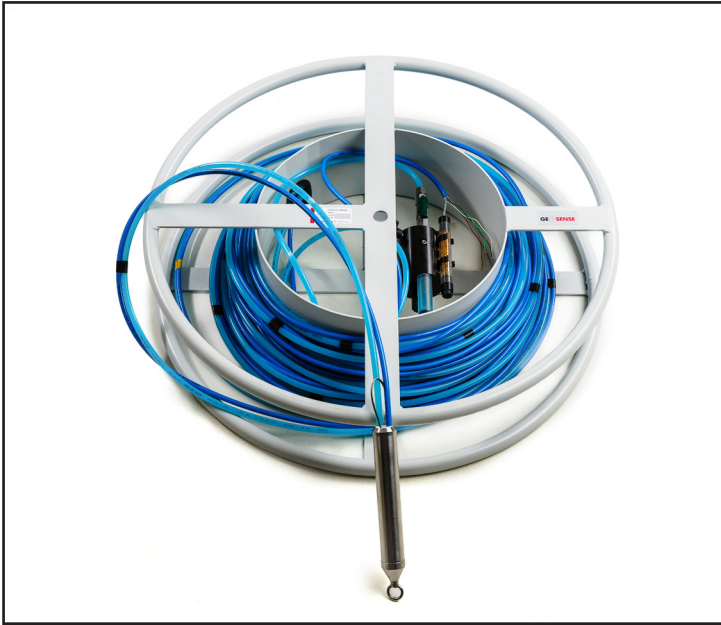

APPLICATIONS

For the measurement of subsurface settlement/heave profiles beneath embankments, surcharges, fills, roadways, storage tanks, structures and landfills. It can also be used to measure differential settlements at discrete points on structures or settlement above tunnelling activity

FEATURES

Not affected by barometric pressure

Simple & easy to use

Accurate settlement profile

The Geosense® Vibrating Wire Hydrostatic Profiler is used for the measurement of sub-surface settlement.

Working principle:

A vibrating wire sensor is located within a probe that can be pulled through a buried pipe or borehole. The sensor is connected via a liquid-filled tube mounted on a reel which is mounted horizontally at the reservoir location on stable ground. The reel is free to turn as the probe is pulled through the pipe or borehole.

The sensor measures the hydraulic head of liquid between the sensor and the reservoir locations.





VW Hydrostatic Profiler

Specifications

GENERAL

Standard Range	7m
Resolution	0.025% FS
Sensor Accuracy	0.1% FS
Temp Range	-20°C to +80°C
Reel Capacity	Max 130m
Probe Length x Diameter	203 x 35mm
Reel Height x Diameter	178 x 610mm

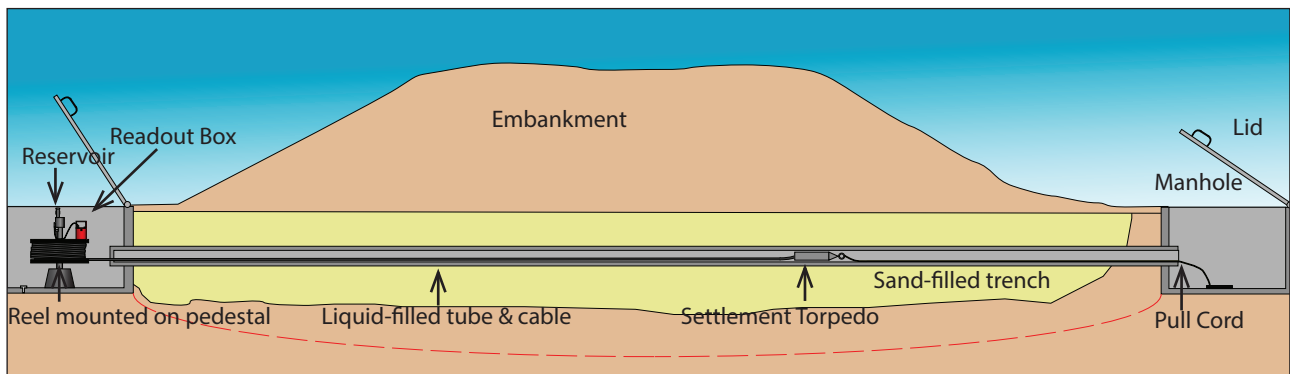

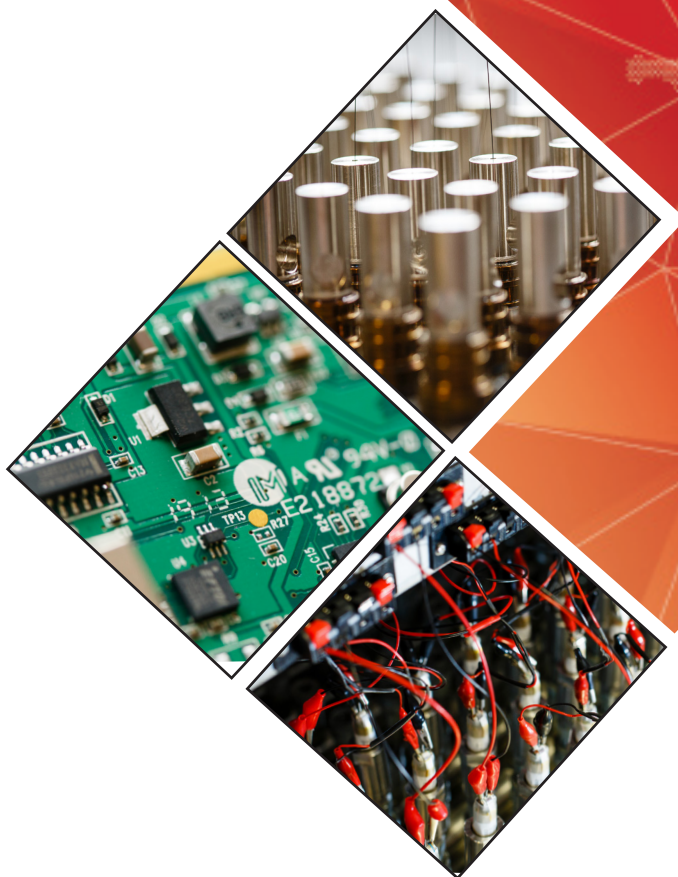

HEAD OFFICE

Nova House
Rougham Industrial Estate
Rougham, Bury St Edmunds
Suffolk IP30 9ND
England

+44 (0)1359 270457
sales@geosense.com
support@geosense.com

NORTH AMERICA OFFICE

15 West 38th Street
Suite 632
New York
NY 10018

+1 518-920-3483
sales@geosense.com
support@geosense.com

www.geosense.com

Specifications are subject to change without notice and should not be construed as a commitment by Geosense. Geosense assumes no responsibility for any errors that may appear in this document. In no event shall Geosense be liable for incidental or consequential damages arising from the use of this document or the systems described in this document. All Content published or distributed by Geosense is made available for the purposes of general information. You are not permitted to publish our content or make any commercial use of our content without our express written consent. This material or any portion of this material may not be reproduced, duplicated, copied, sold, resold, edited, or modified without our express written consent.

V1.7 10/2024